



Assembly Instruction •

Eames Soft Pad Group Executive Chair Replica



Welcome Guide

www.sohnne.com

COMPONENTS


1	2	3
Chair Body (x1)	Base (x1)	Gas Spring (x1)
4	5	6
\$\\ \tag{\tau}{\tau} \\ \tag{\tau}{\tau}		
Castor Wheels (x5)	Armrests (x2)	15mm M6 Screws (x6)
7		
Allen Key (x1)		

ASSEMBLY


Step 1: Using the Allen Key, attach the Armrests to the Chair Body with the Screws.



Step 2: Attach the Castor Wheels to the Base.



Step 3: Attach the Gas Spring to the Base Assembly.

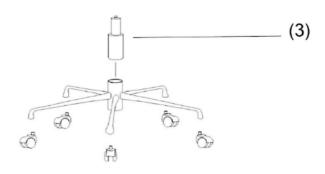

Step 4: Align the Chair Body with the Gas Spring and lower it onto the Base Assembly.



Completed

