






Welcome Guide


www.sohnne.com

Assembly Instruction

Box 1:

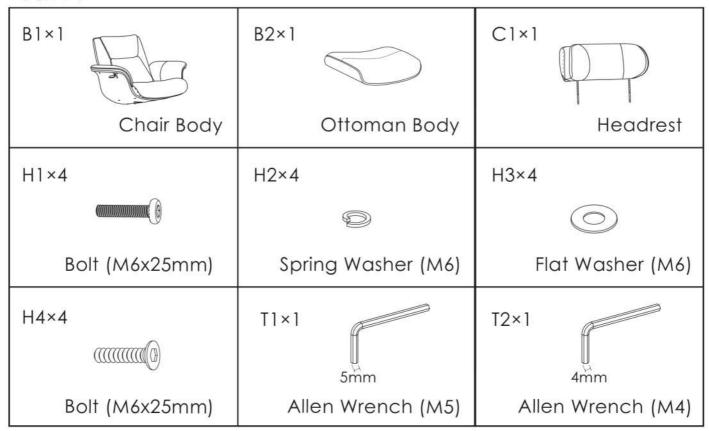


Box 2:

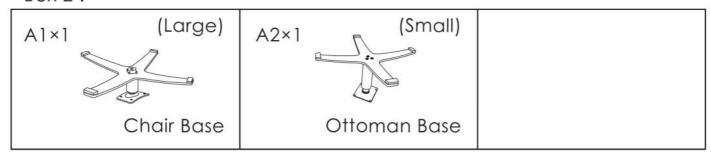


1 Attach the Chair Base (A1) to the Chair Body (B1) using Bolts (H1), Spring Washers (H2), Flat Washers (H3) and Wrench (T1).

Note: Please pay attention to the direction of the Chair Base (A1). The higher end of the metal plate on the Chair Base (A1) should face the front of the chair and the lower end should face the back.


Note: Do NOT use power tools for assembly.

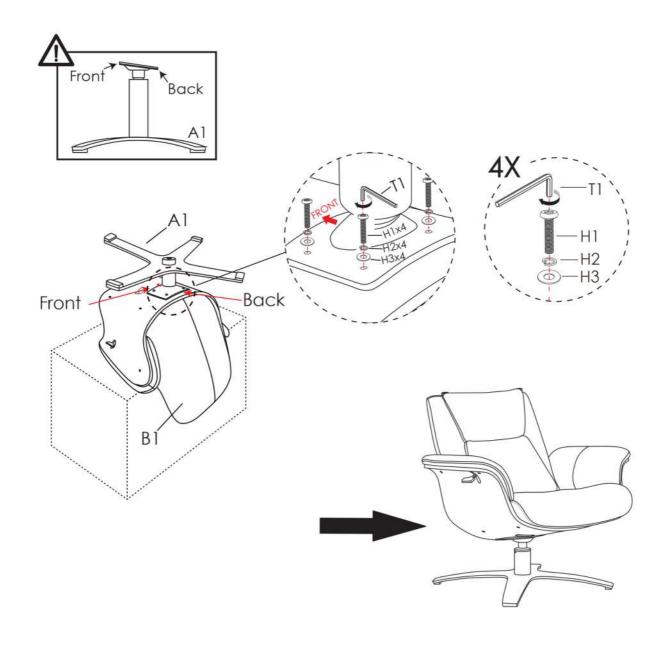


3 Insert the Headrest (C1) into the Chair Body (B1).

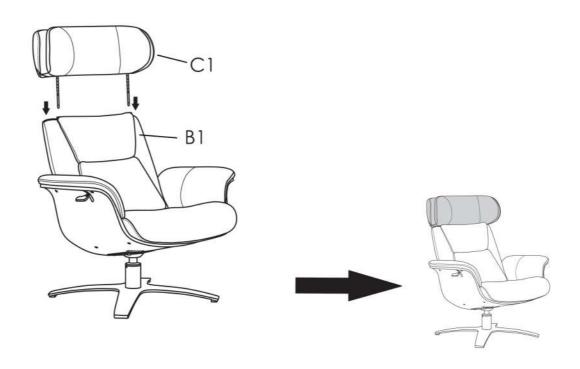


Unpack and place the Ottoman Body (B2) on a soft, clean surface. Attach the Ottoman Base (A2) to the Ottoman Body (B2) using Bolts (H4) and Allen Wrench (T2).

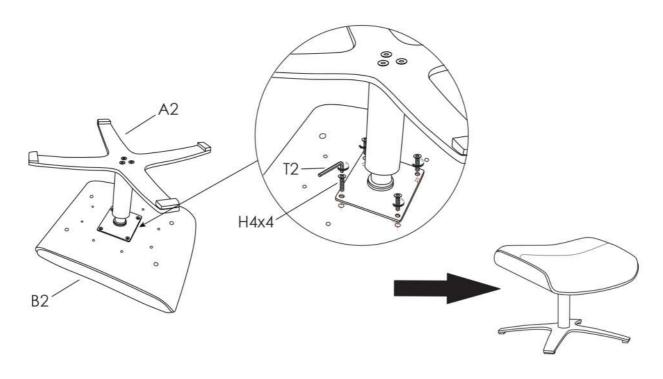

Assembly complete. Enjoy.

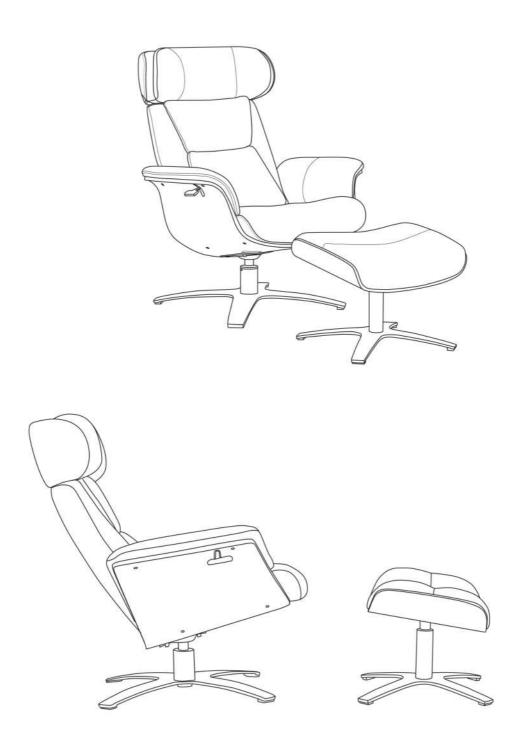


How to adjust the headrest?

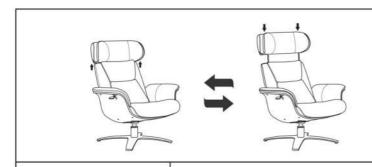


•Lift or lower the headrest to accommodate different heights.



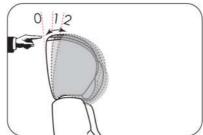


•The headrest has 3 different positions: Position 0 (original position), Position 1, Position 2. Push the headrest forward slightly to get to Position 1 and Position 2.

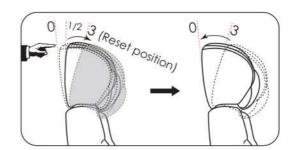

Reset: Push the headrest further forward to Position 3, the headrest will then be released to Position 0.

How to adjust the backrest?

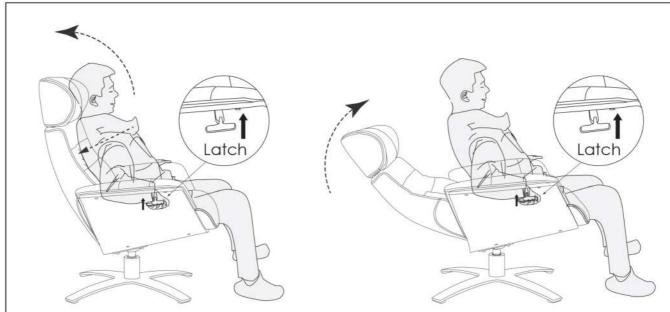

1) From Upright Position to Fully Reclined Position: 2) From Fully Reclined Position to Upright Position: Lift the latch to recline.

Sit up slightly. Lift the latch and the backrest will move forward to upright position.

