

SOHNNE®
ELEVATED LIVING

21^{MID}
Century

Assembly Instruction ✓

PH Artichoke Lamp Replica





Welcome Guide

www.sohnne.com

Assembly Instruction


17725-I1

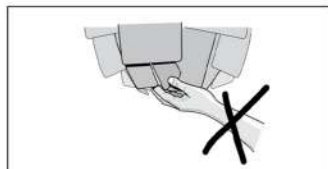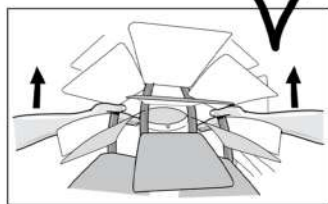

Minimum height

A

Artichoke Ø33.1" A* = 25.6"
Artichoke Ø28.3" A* = 28.3"
Artichoke Ø23.6" A* = 27.5"

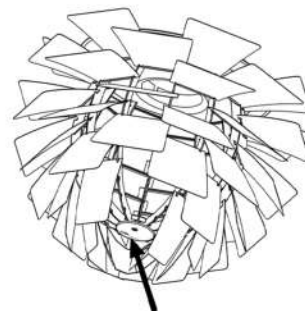


ID NUMBER: _____







Please register ID number at www.louispoulsen.com


- Green (Ground) For dimming wires use class 1 wiring methods:
- White (Neutral) Grey (0-10V Dim -)
- Black (Line) Violet (0-10V Dim +)

FOR DIMMING:

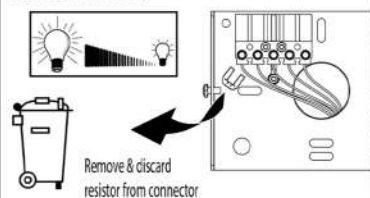

FOR NON-DIMMING:

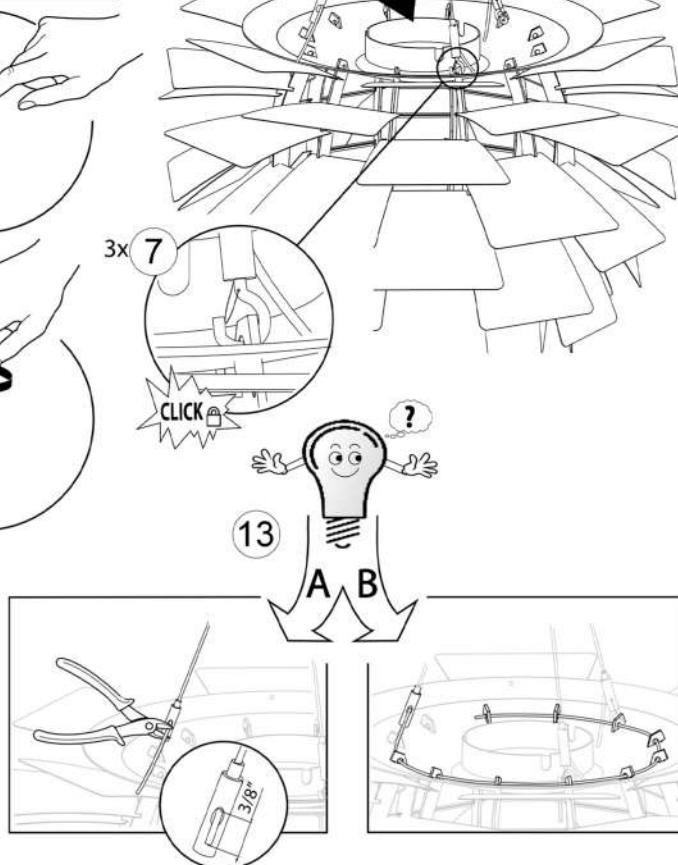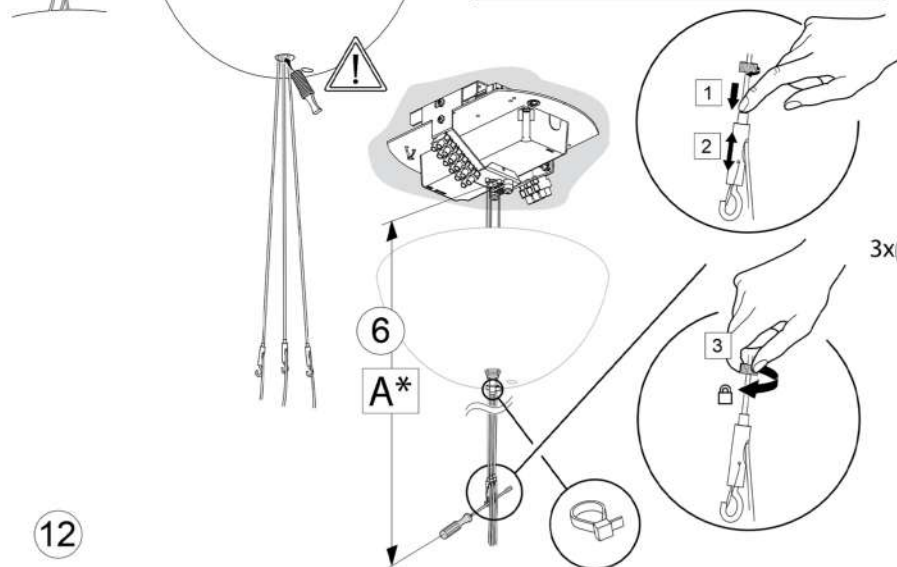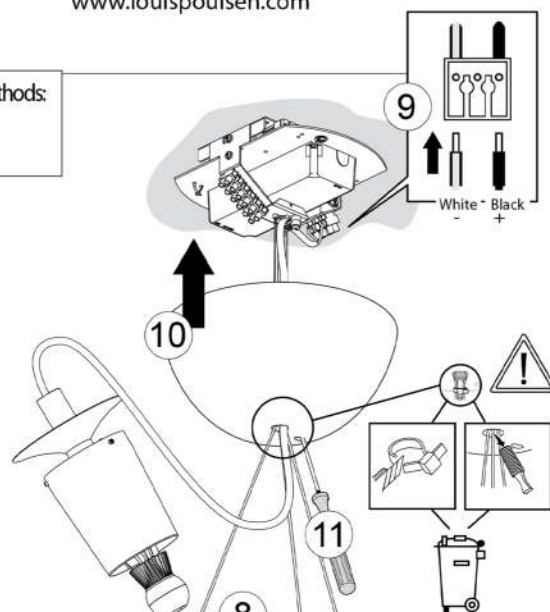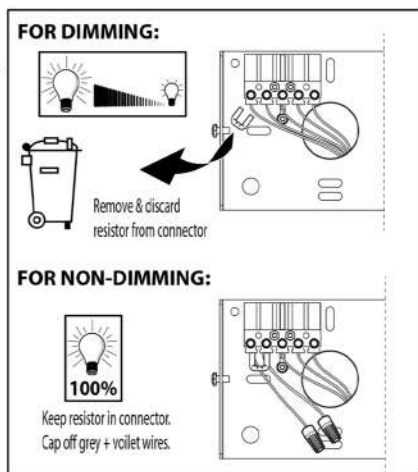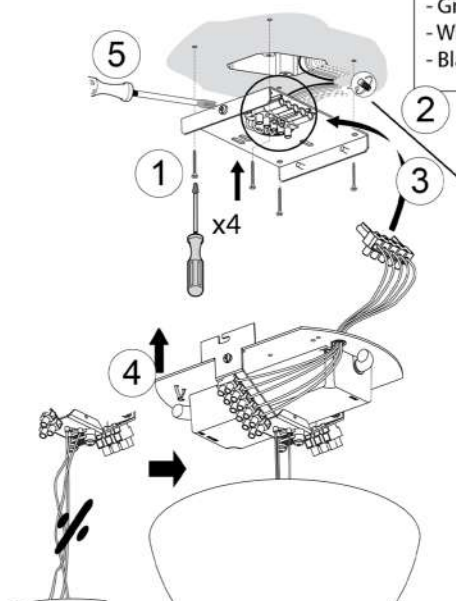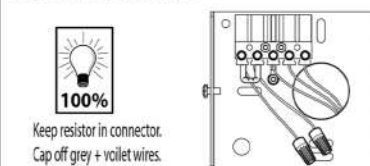

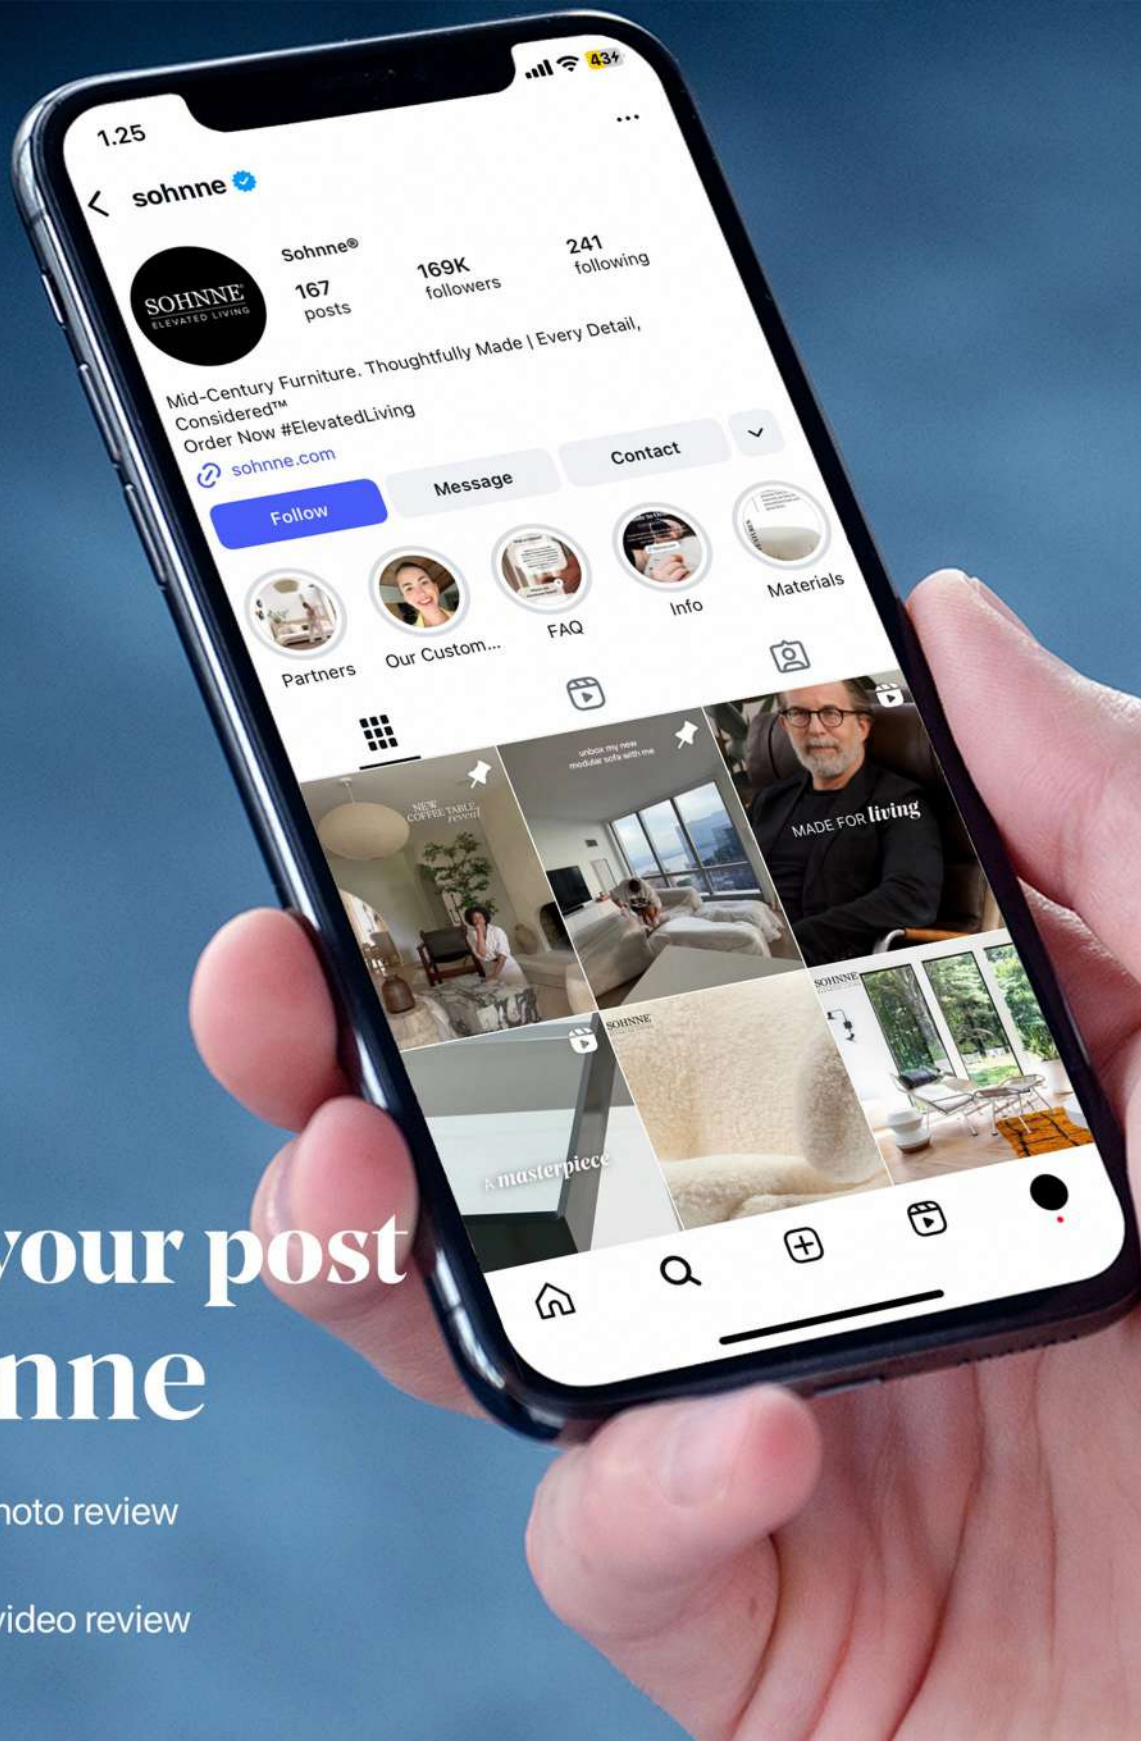

Tag in your post @sohnne



\$50 off for photo review



\$100 off for video review

SOHNNE®
ELEVATED LIVING