

Assembly Instruction ✓

Ducaroy Configuration



Welcome Guide

www.sohnne.com

Assembly Instructions

Ready to Use

- Your Ducaroy Configuration arrive fully assembled — no tools needed.
- Carefully remove all packaging.
- Do not cut close to the covers.

Foam Recovery






After unpacking, allow 12–24 hours for cushions to fully expand and regain shape.

Ducaroy Configuration Parts


- Fireside
- Loveseat
- Sofa
- Corner
- Fireside Depth
- Ottoman

Placement

- Set modules on a flat, clean surface.
- Protect floors with felt pads or the included non-slip pads.

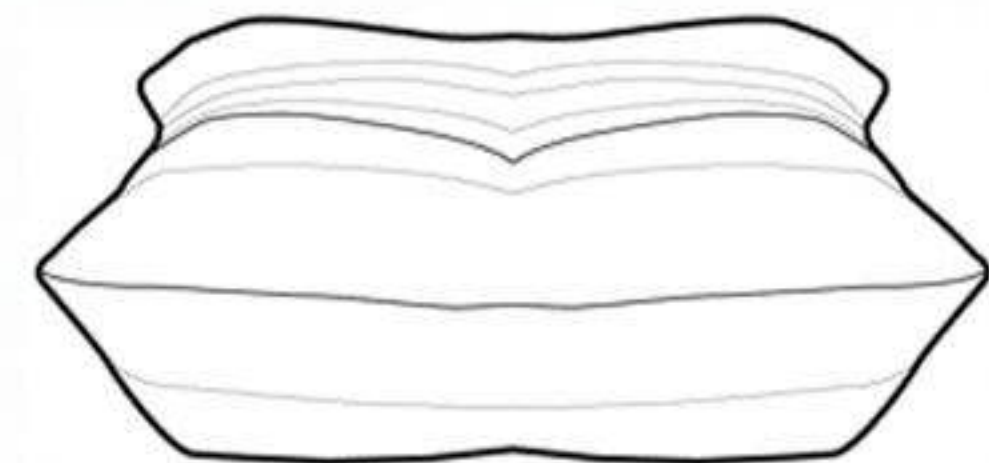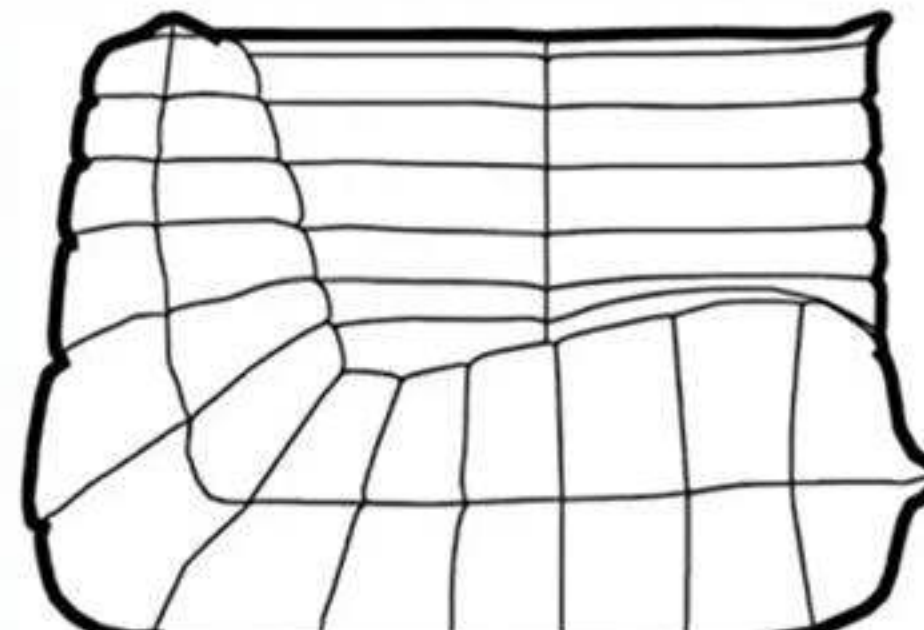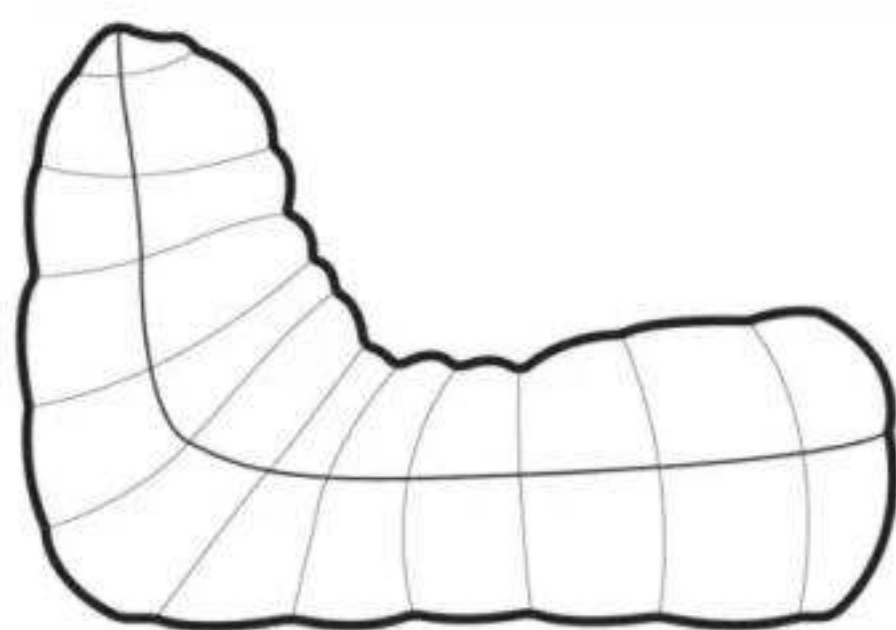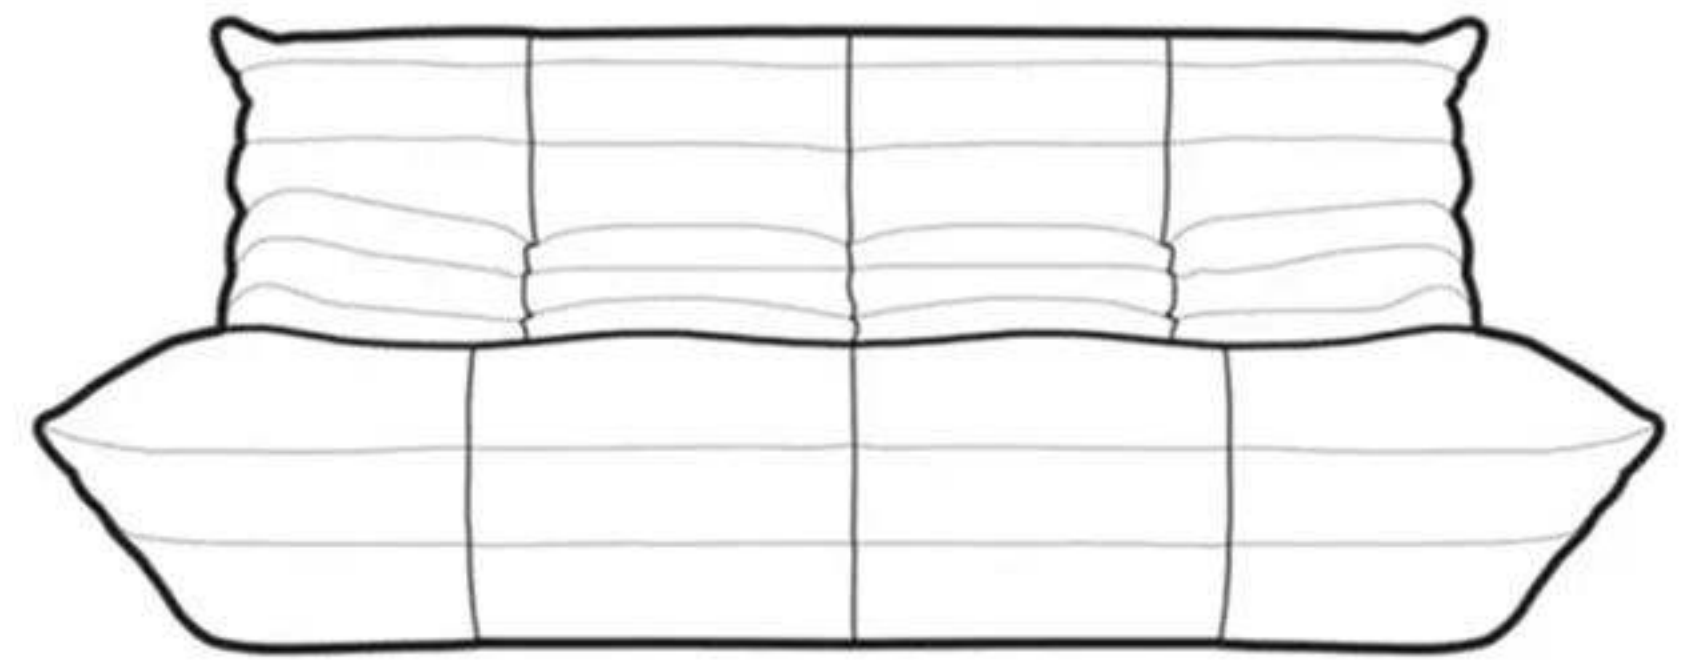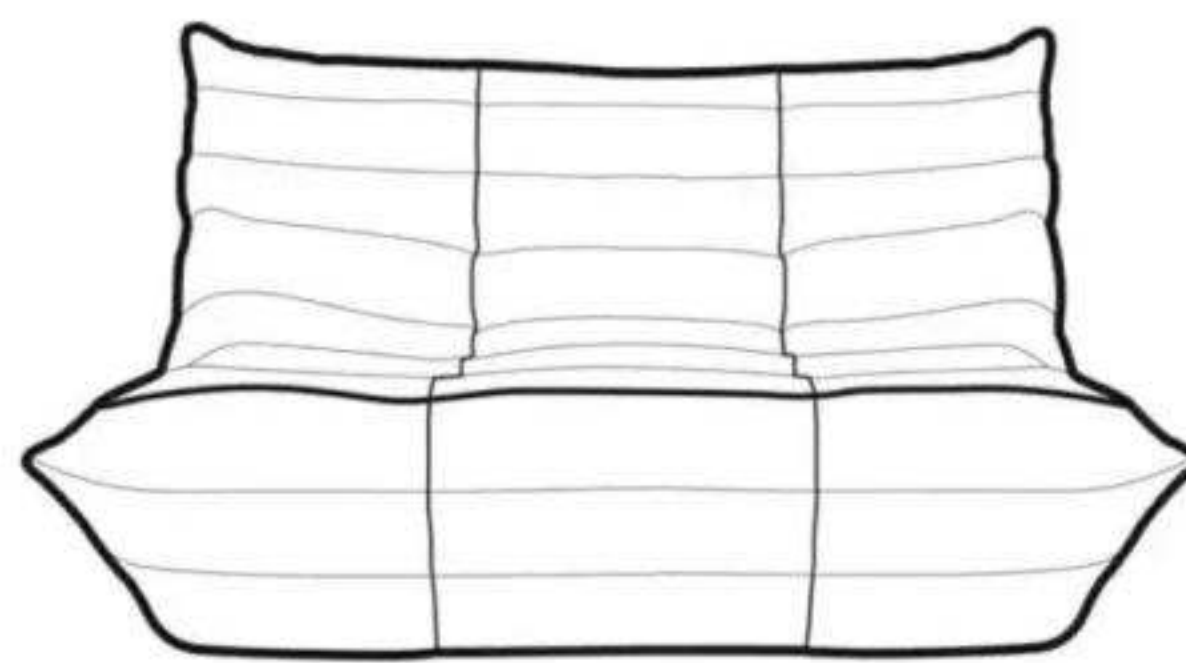

Ducaroy Configuration

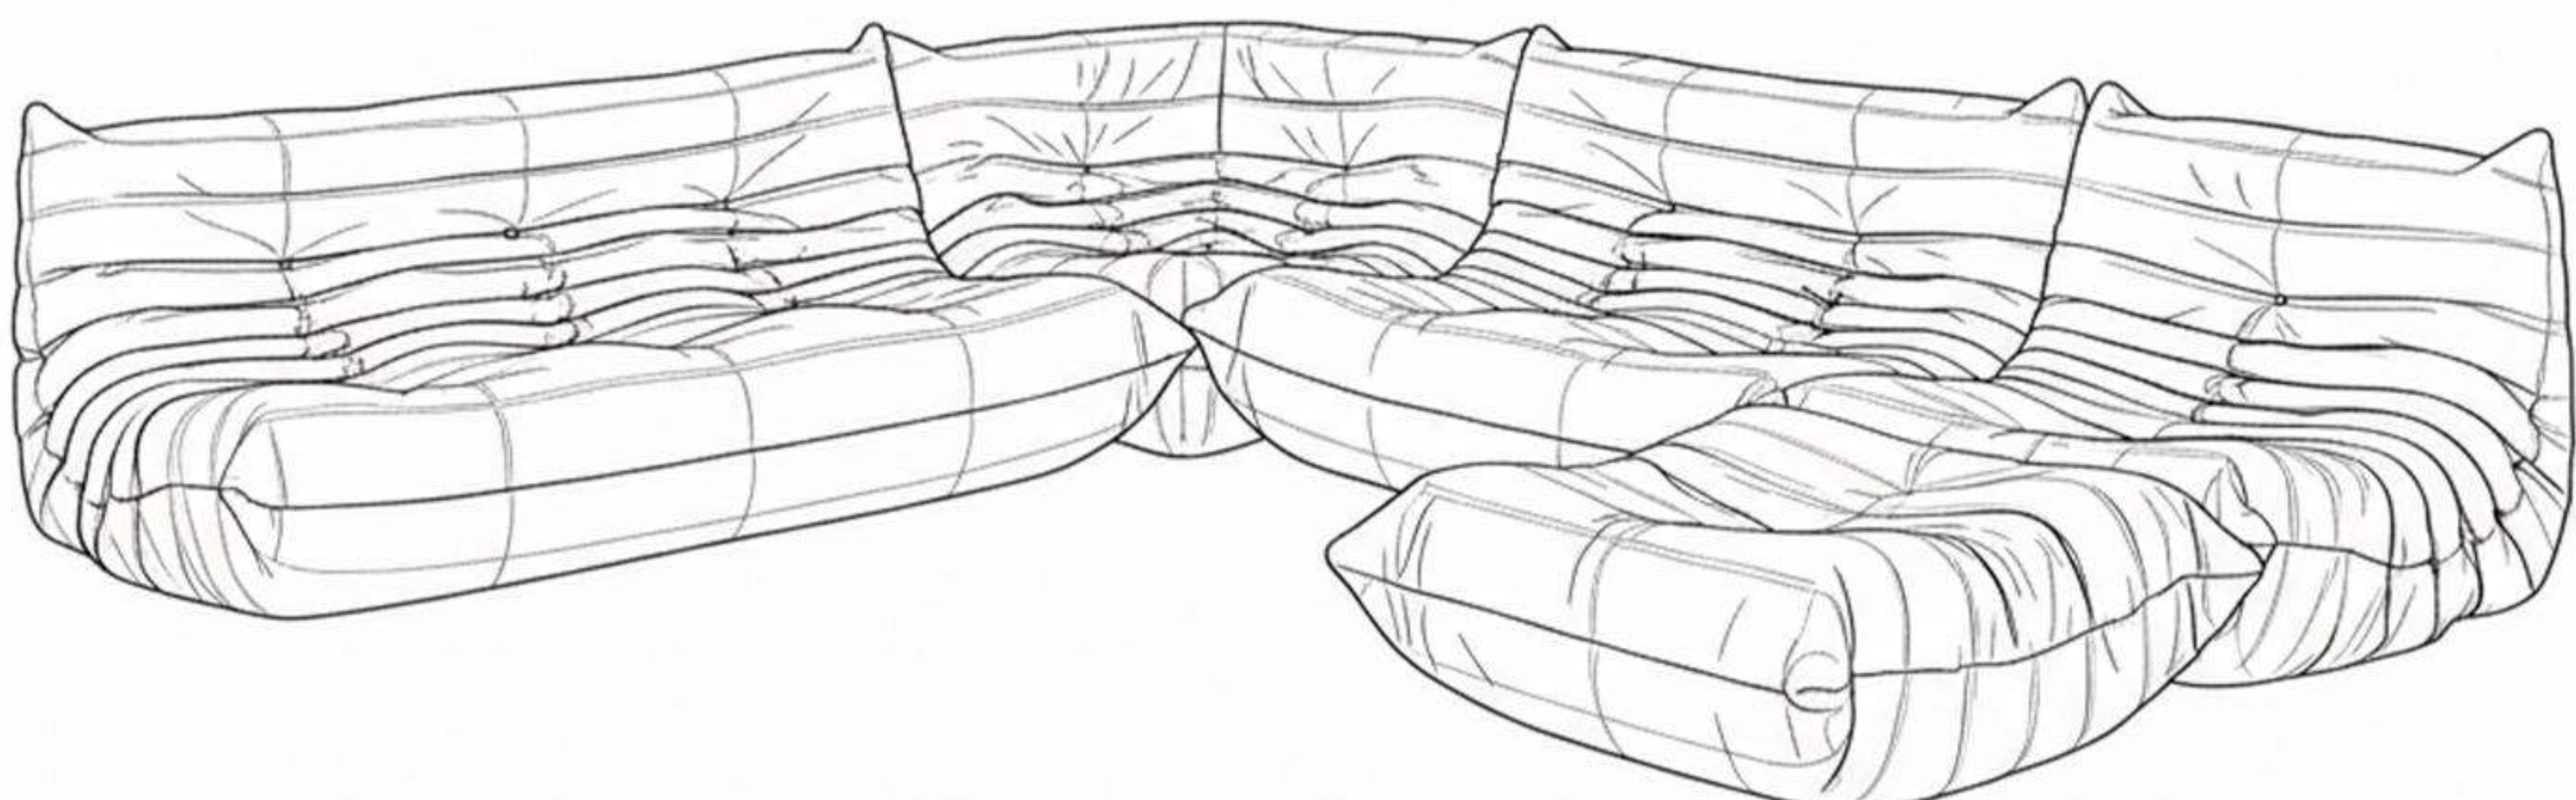

Assembly Instructions

Layout (Ducaroy Configuration shown)

Position the Corner

Place the corner first where the L-shape will turn.

Build the Left Run

- Add an Loveseat to the left of the corner.
- Add an Fireside to the left of the loveseat.

Build the Right Run

- Add an Loveseat to the right of the corner.
- Add an Fireside to the right of the loveseat.

Add the Fireside


Place the Fireside where you want a relaxed seat

Finish with the Ottoman


Set the Ottoman in front of the fireside or at the end to form a chaise.


Align & Secure

- Nudge modules together so seams line up and channels match.
- If anti-slip pads or connectors are included, install them now under/between modules.
- Press seats together to remove gaps and check everything sits level.

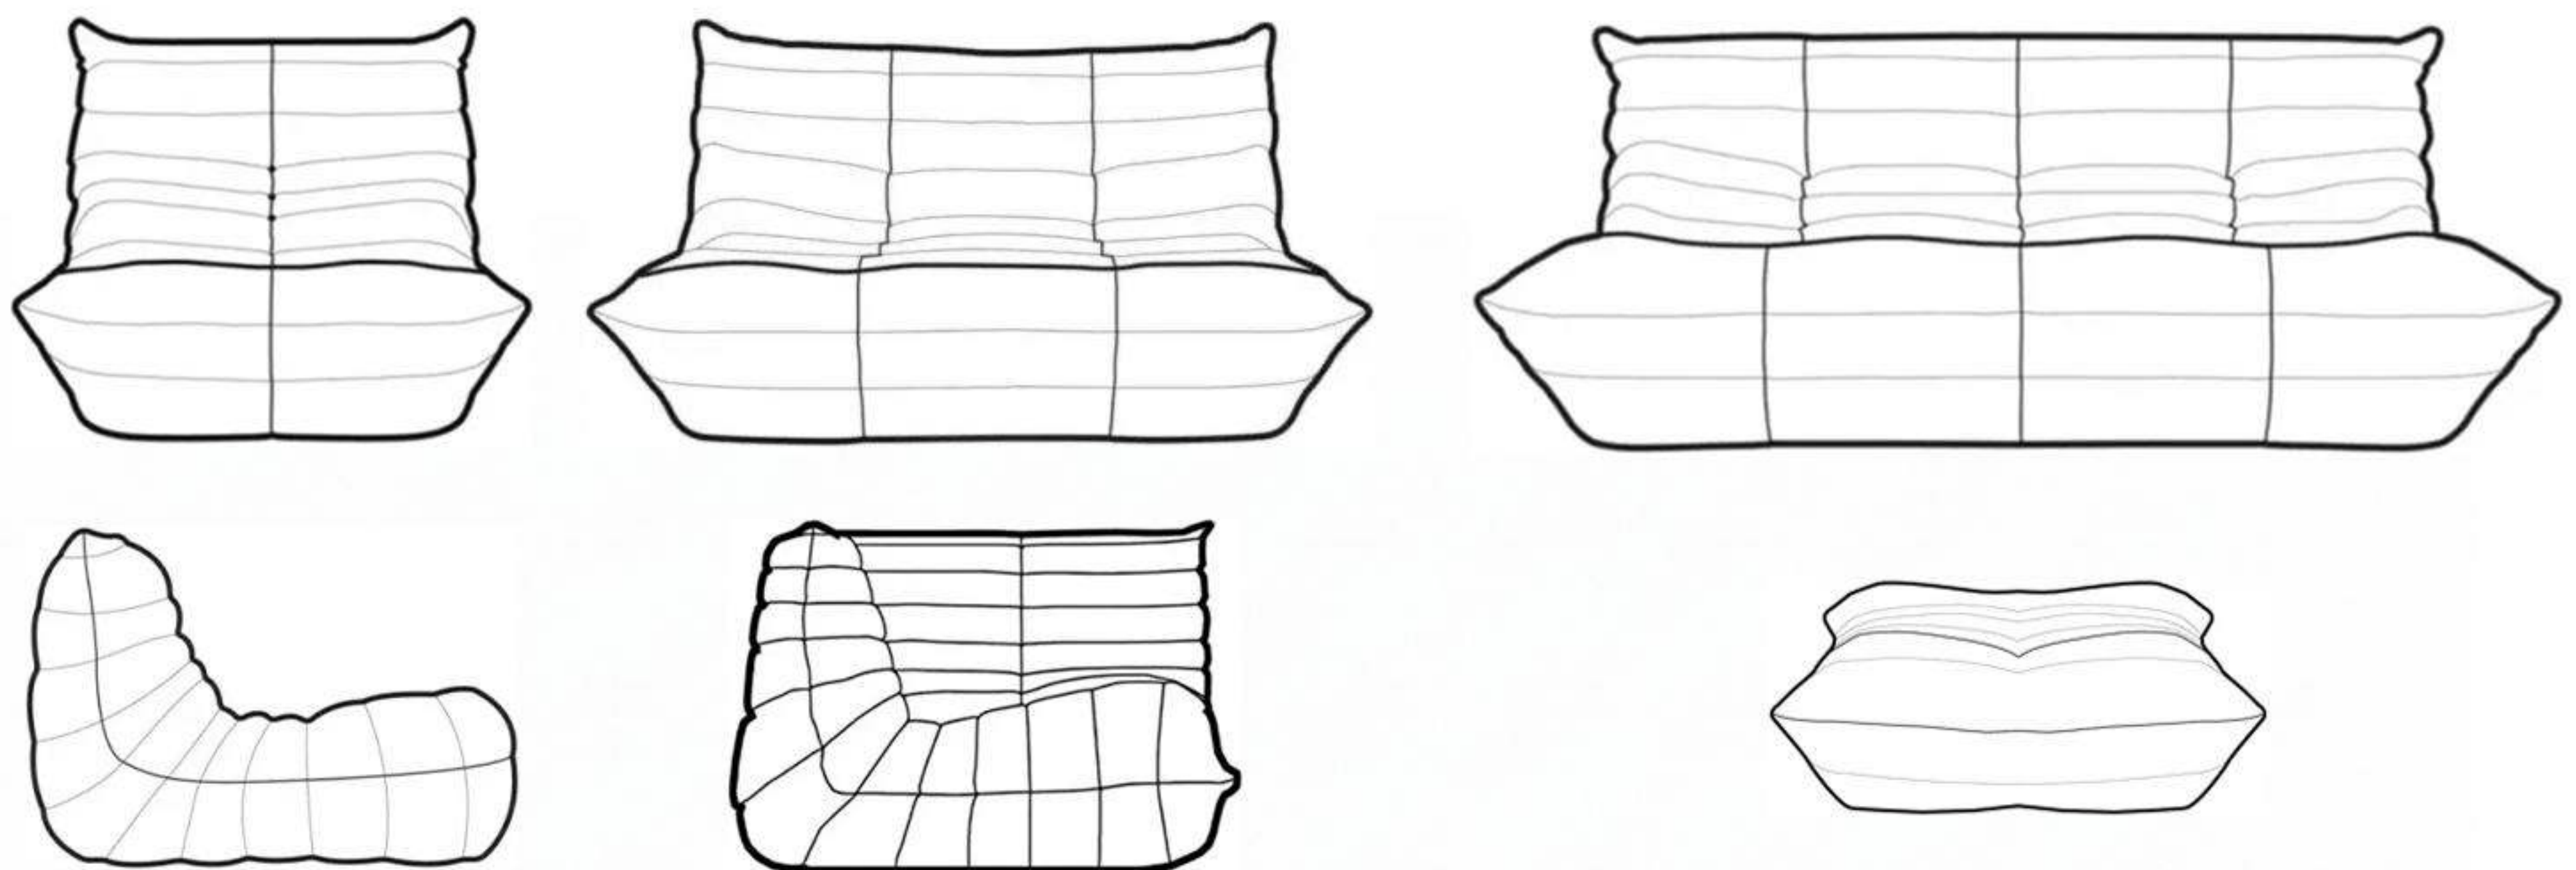

Ducaroy Configuration

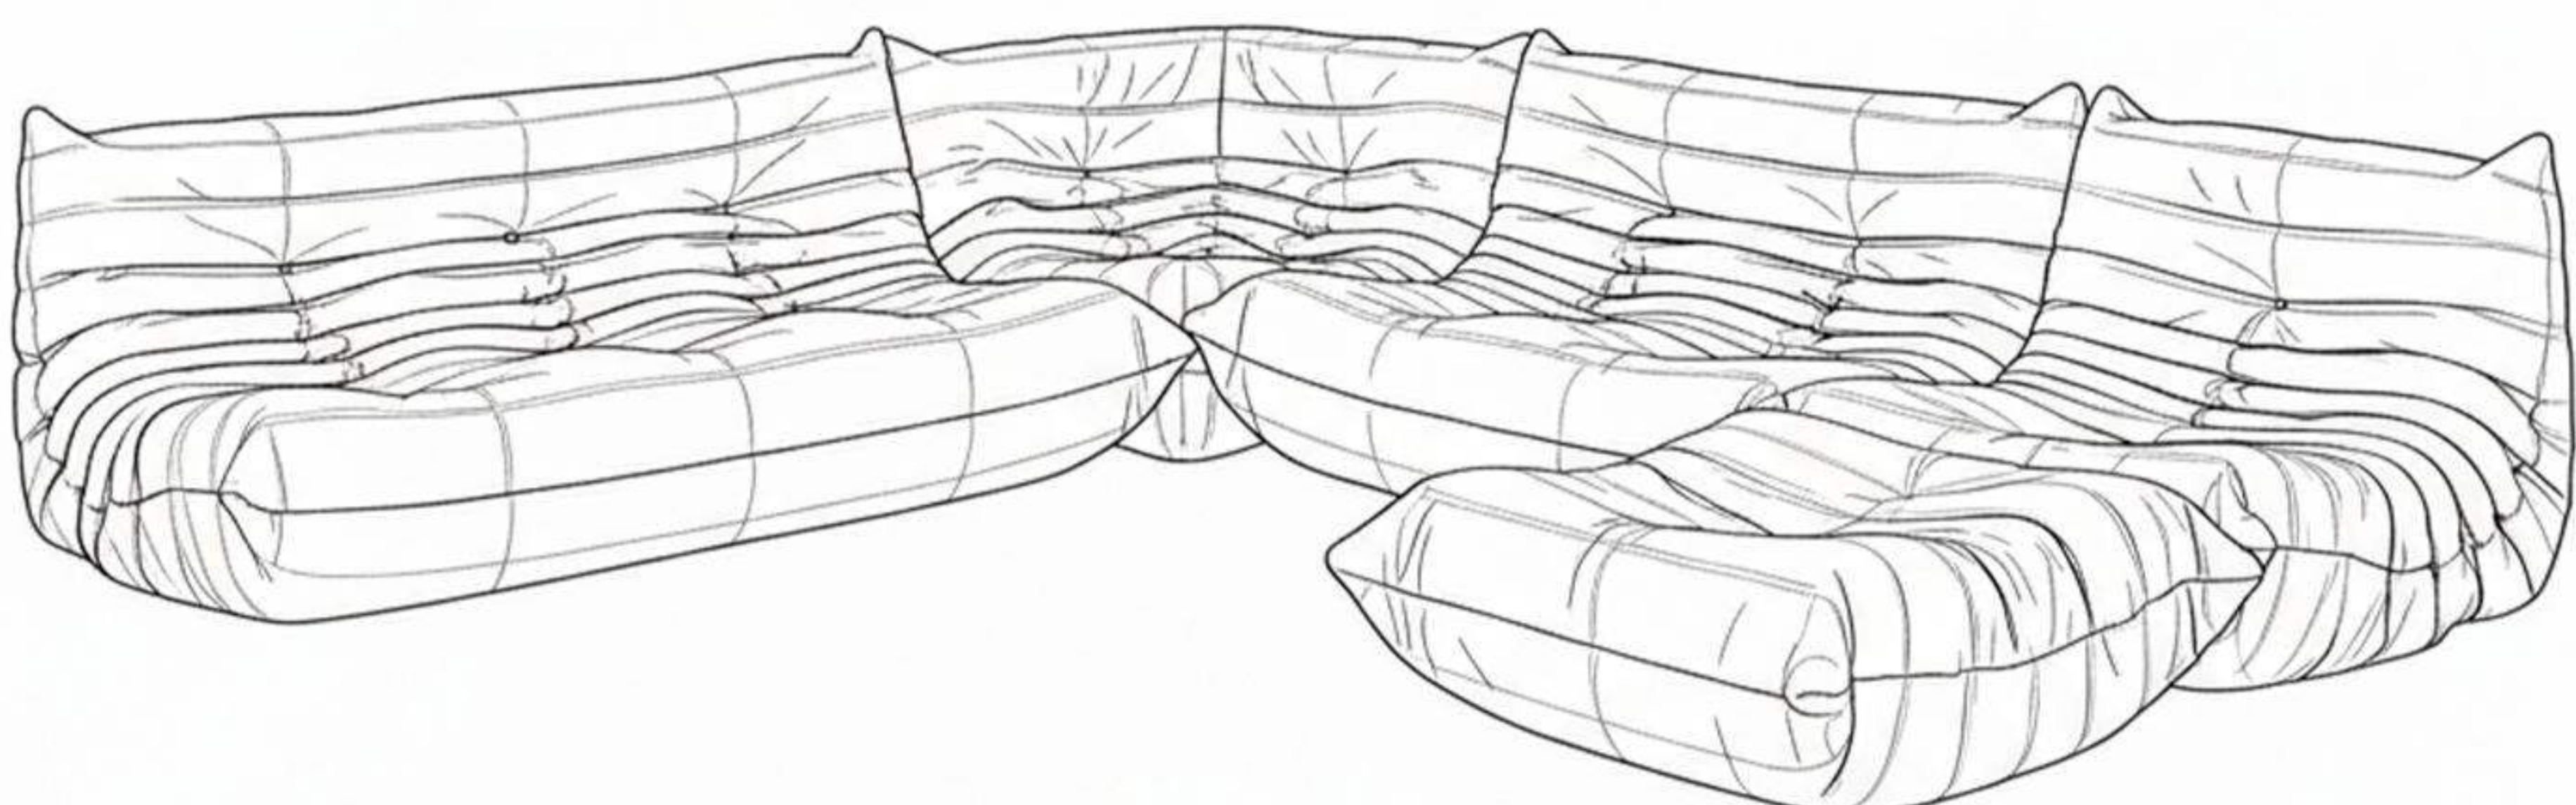

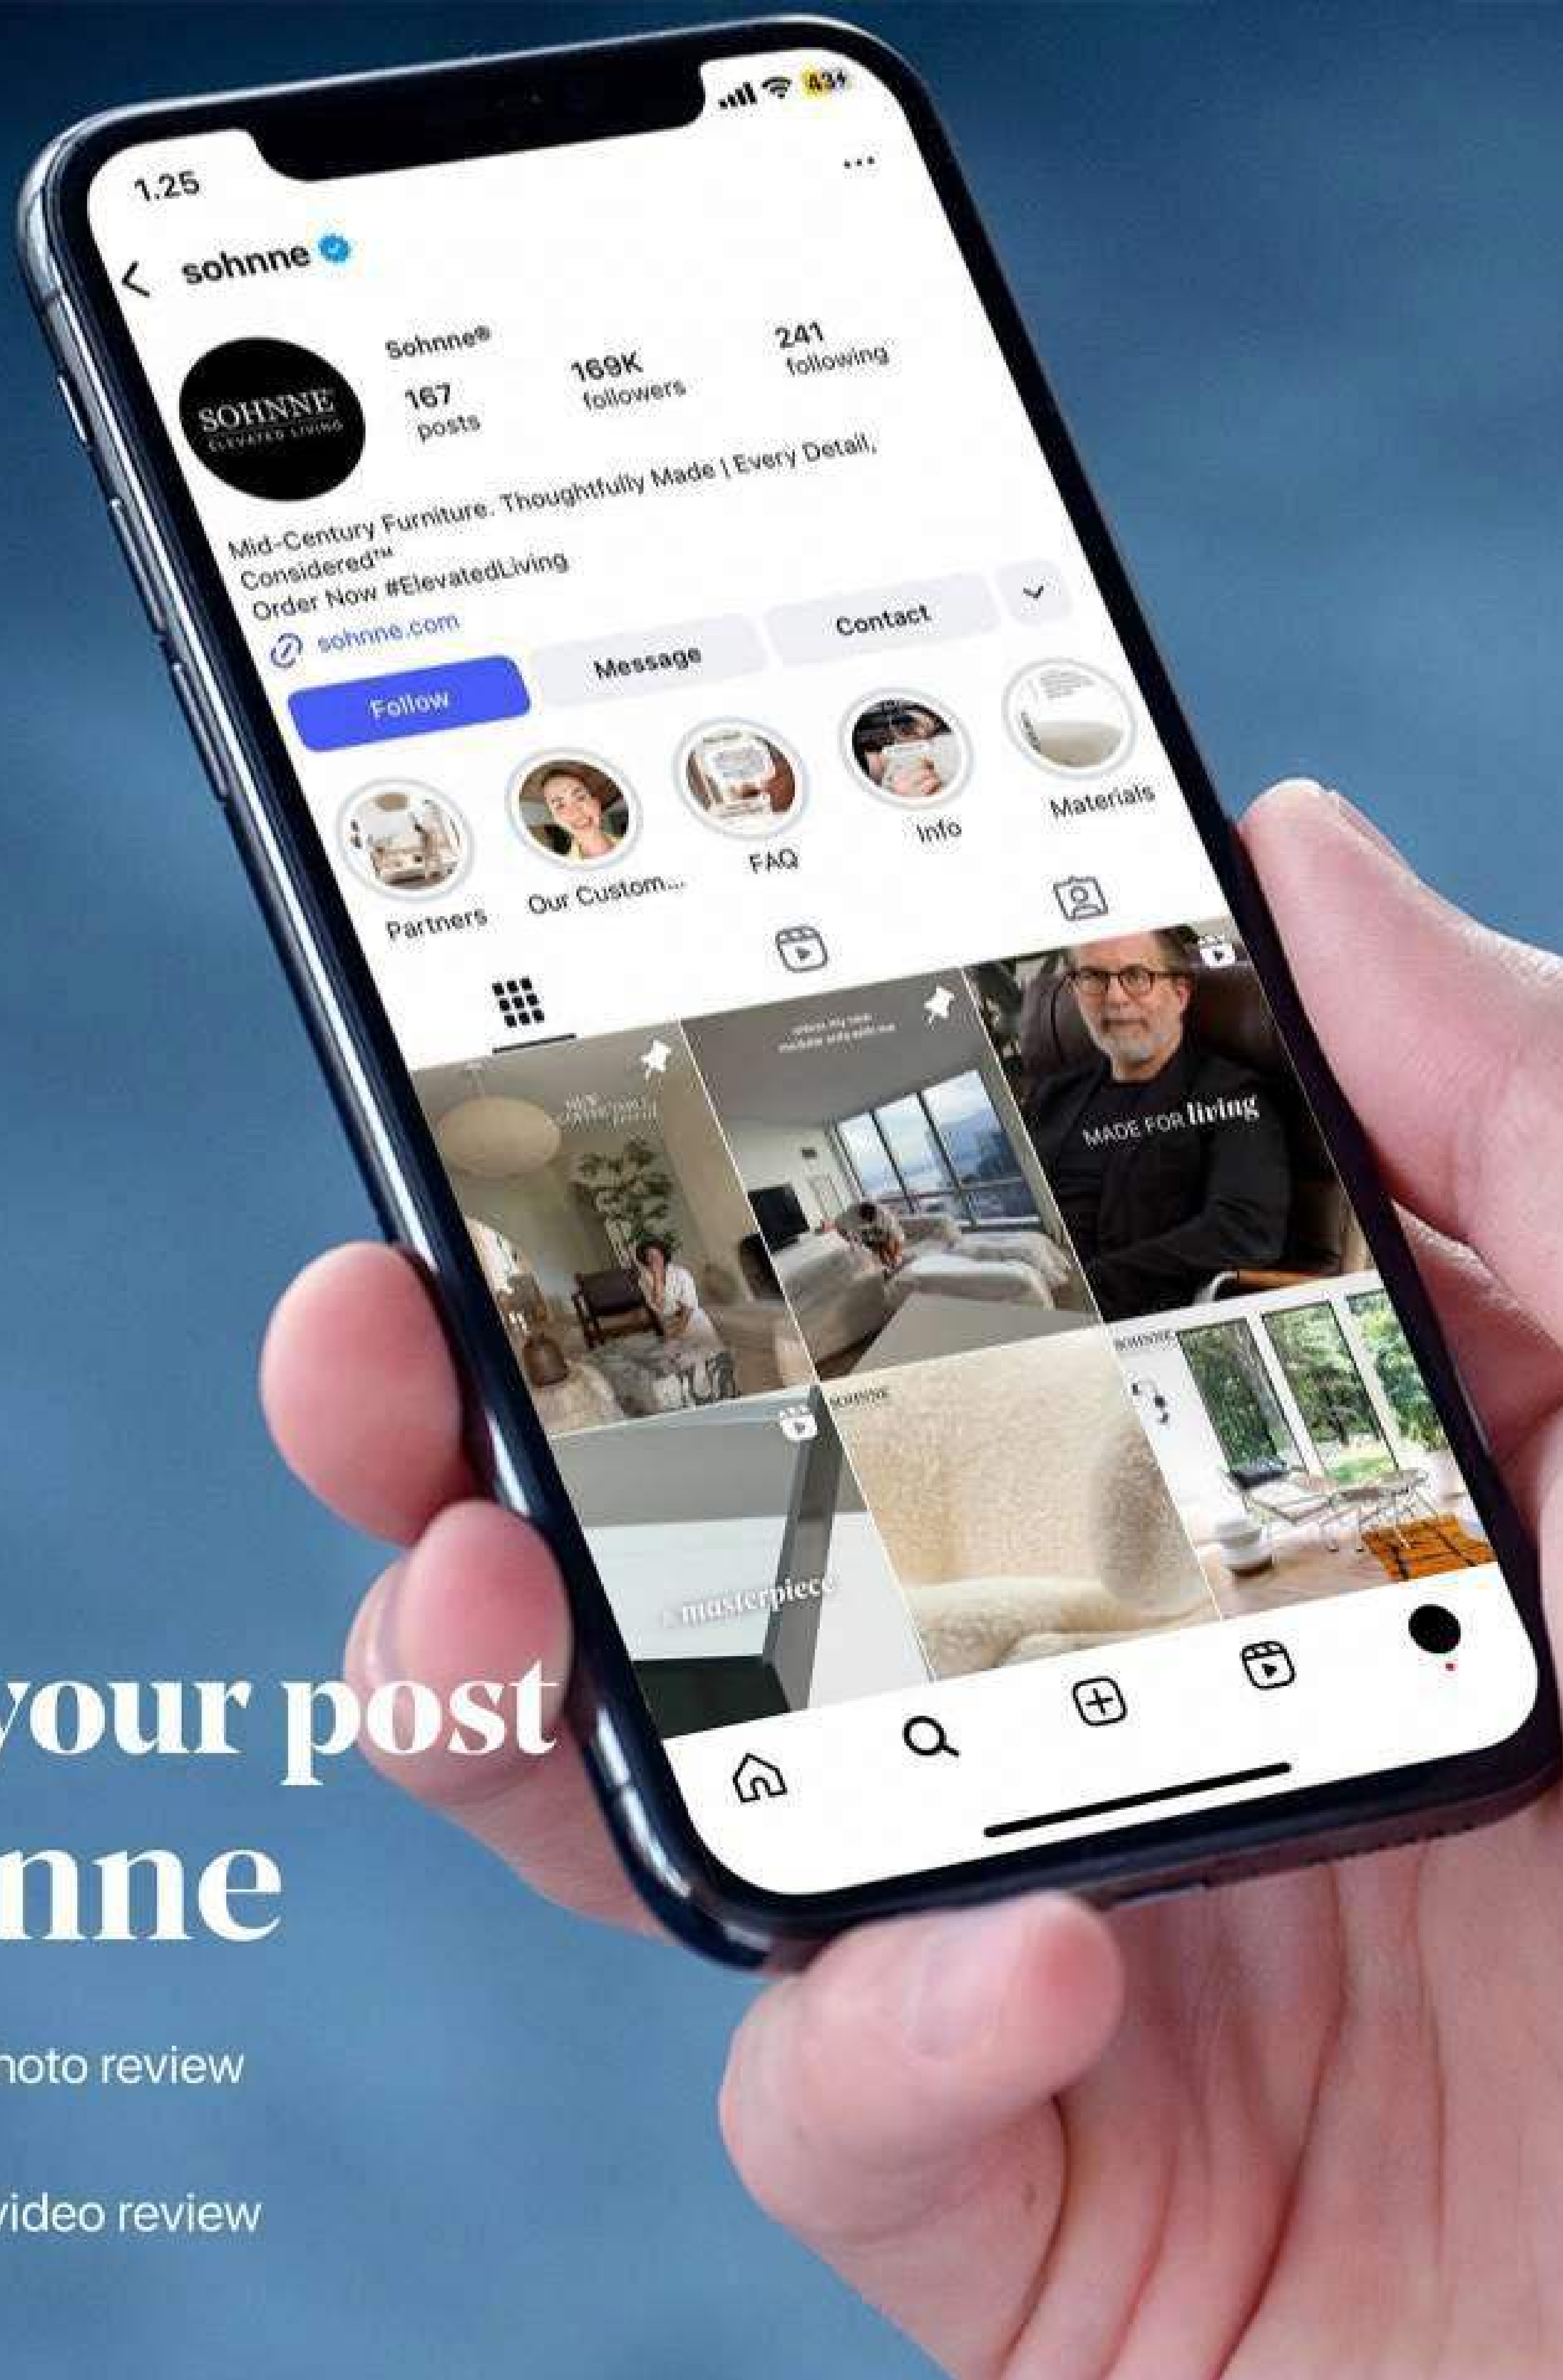

Tag in your post @sohnne



\$50 off for photo review



\$100 off for video review

SOHNNE®
ELEVATED LIVING